

DIAMOND



Saç Kurutma Makinesi - Kullanma Kılavuzu
Hair Dryer - Instruction Manual

1.Giriş:

Uzun yıllar sorunsuz çalışması için tasarlanan ve üretilen Fakir Diamond Saç Kurutma Makinesi'ni satın almış olduğunuz için teşekkür ederiz.

Kullanma talimatları hakkında bilgi

Benzer ürünleri kullanmaya alışık olabilirsiniz, ancak kullanma kılavuzunu okumak için lütfen zaman ayırınız. Bu kılavuz satın almış olduğunuz üründen en iyi performansı almanız için hazırlanmıştır.

Sorumluluk

Bu kullanım kılavuzundaki talimatlara uygun olmayacak şekilde kullanım sonucunda ortaya çıkabilecek bir hasar oluşması durumunda Fakir Elektrikli Ev Aletleri Dış Tic. A.Ş. sorumluluk kabul etmez. Cihazın, kendi alanı dışında bir yerde kullanılması, Fakir yetkili servislerinden baka bir yerde tamir ettirilmesi durumunda Fakir Elektrikli Ev Aletleri Dış Tic. A.Ş. sorumluluk kabul etmez.

Güvenlik Önemlidir

Kendi güvenliğiniz ve diğerlerinin güvenliği için ürünü çalıştırmadan önce kullanma kılavuzunu okuyunuz. Bu kılavuzu ilerideki kullanımlar için güvenli bir yerde saklayınız. Eğer cihazınızı birisine veriyorsanız, kullanma kılavuzunu da veriniz. Bütün paketleri sökünüz, fakat cihazınızın çalıştığından emin olana kadar da paketleri saklayınız.

2.Güvenlik uyarıları:

CE uygunluk deklarasyonu

Bu cihaz Avrupa Birliği'nin 2004/108/EC Elektromanyetik Uyumluluk ve 2006/95/EC Gerilim Direktifleri'ne tamamen uygundur. Bu ürün cihaz tip etiketinde CE işaretine sahiptir.

Kullanım Alanı

Cihazı ev tipi kullanıma uygundur, kendi kullanım alanı dışında ve dış ortamlarda kullanmayınız.

Yetkisiz Kullanım

Aşağıda belirtilen yetkisiz kullanım

durumlarında, cihaz zarar görebilir ya da yaralanmaya yol açabilir;

Bu cihaz akli dengesi yerinde olmayan kiilerin ya da bu tip cihazları kullanmak için yeterli bilgisi olmayan kiilerin kullanması için uygun değildir. Bu tip kiilerin cihazı kullanmasına kesinlikle izin vermeyiniz.

Cihaz bir oyuncak değildir. Bundan dolayı çocukların bu cihazı kullanmalarına izin vermeyiniz ve cihazı çocukların yanında kullanırken daha dikkatli olunuz.

Paketin içinden çıkan, post ve karton gibi maddeleri çocuklardan uzak tutunuz. Aksi takdirde çocuklar bu maddeleri yutmak-boğulmak suretiyle kendilerine zarar verebilirler!

Güvenlik Talimatları

- Cihazı kullanmadan önce, kullanma kılavuzunu okuyunuz.
- Cihazı çalıştırmadan önce şebeke voltajının cihazınızın tip etiketinde gösterilenle aynı olduğunu kontrol ediniz.
- Cihazınızı kesinlikle içi suyla dolu olan küvet, lavabo, v.b. yakınında kullanmayınız.
- Cihazı banyoda kullanıyorsanız, her kullanımdan sonra herhangi bir zararın (elektrik çarpması, yangın, v.b.) önlenmesi için cihaz kapalı konumda olsa bile fişni mutlaka prizden çekiniz.
- Bu cihaz küçük çocukların veya fiziksel, ruhsal, beynsel yetenekleri düşük veya deneyimi ve bilgi düzeyi eksik kişilerin kendi güvenliklerinden sorumlu olan bir kişi tarafından gözetilmedikçe kullanılması için yapılmadı. Küçük çocukların cihaza ulaşmalarına engel olunuz.
- Hava girişbölmesini kesinlikle kapatmayınız.
- Cihaz fazla ısınma sonucu, otomatik olarak kendi kendini kapatacaktır. Cihazı tekrar çalıştırmadan önce, hava girişkısının saç, tüy v.b. herhangi bir nesne ile kapatılmamış olduğundan emin olunuz ve cihazın fişni çekip, birkaç dakika boyunca soğuması için bekleyiniz.
- Sıcak havayı direkt gözünüze veya yüzünüzdeki diğer hassas bölgelere doğru tutmayınız.
- Cihazı kesinlikle ıslak ellerle tutmaya

çalışmayınız, suya değdirmeyiniz, akan su altında tutmayınız ve ıslanmasına engel olunuz.

- Cihazınızı temizlemek için kesinlikle sert, aşındırıcı temizlik malzemeleri kullanmayınız.
- Cihaz dış yüzeyini hafif nemli bir bez ile temizleyebilirsiniz.
- Çocukların cihazı kullanmalarına ya da cihazla oynamalarına engel olunuz.
- Cihazınız çalışırken, cihazınızı kesinlikle gözetimsiz bırakmayınız.
- Cihazınızı kesinlikle parlayıcı, patlayıcı kimyasalların ya da sıvıların yakınında kullanmayınız.
- Cihazın kablосunu ısınmış sıcak yüzeylerden uzak tutunuz.
- Cihazı kesinlikle su yakınında kullanmayınız.
- Cihazınız su içine düşmüŖse, cihazı almak için elinizi suya değdirmeyiniz.
- Cihazınızı kesinlikle tamir etmeye ya da sökmeye çalışmayınız.
- Cihazınızı kesinlikle uzatma kablosuna bağı şekilde çalıştırmayınız. Cihazın güç kablosu elektrik enerjisini kesinlikle prizden almalıdır.
- Cihazınızı düŖmemeye özen gösteriniz.
- Cihazı kendi kullanım alanı dışında kullanmayınız. İnsan saçını kurutmak ya da saç a şekil vermek dışındaki kullanım alanlarında kullanmayınız.
- Cihazın fiŖni prizden çekerken kesinlikle kablосundan tutarak çekmeye çalışmayınız. Cihazın fiŖni prizden çekmek için her zaman cihazın fiŖnden tutarak çekiniz.
- Cihazın güç kablosunu kıvrımayınız, kıvrarak muhafaza etmeyiniz.
- Cihazınızı eğer kablosu, fiŖ veya herhangi bir parçası arızalı ise kesinlikle kullanmayınız. Cihazınızın kablosu, fiŖ veya parçaları hasarlı ise, herhangi bir zararın önlenmesi için yetkili bir Fakir servisi tarafından yerine yenisi ile değıtirilmelidir.
- Cihazınızı kutusuna yerleŖirmeden önce ya da kaldırmadan önce cihazın tamamen soğumasını bekleyiniz.
- Her kullanımdan sonra cihazınızı kapatıp, fiŖni prizden çekiniz.

DI KKAT: Kullanma kılavuzunuzda yazılı olan güvenlik kurallarını ve kullanma talimatlarını dikkatlice okuyunuz.

Bu kullanma kılavuzunu ilerideki kullanımlar için saklayınız.

3- Ürün Bilgileri:

Güç : 2200 Watt

Voltaj: 220-240V~50 Hz

Koruma sınıfı: II

Kullanım Ömrü : 7 yıl

4- Ürün Parçalarının Tanıtımı:



5-Cihazın Kullanımı

- Cihaz fiŖni prize takınız.
- Cihazınızı istediğiniz hız ayarında seçerek çalıştırınız. Hız ve ısı ayarı ağıdaki gibi ayarlanabilmektedir;

0-Kapalı	1- Düşük ısı
1-Düşük hız	2- Orta ısı
2-Yüksek hız	3- Yüksek ısı

- Saçınızı kuruttuktan sonra soğuk fön düğmesine basıp, saçınıza soğuk hava vererek, saçınızın şeklini belirginleŖebilirsiniz.
- Dar fön bağı ve difüzör cihazın ön gövdesine kolayca takılıp çıkartılabilir. Dar fön bağı ve difüzörü dik konumda takarak çevirin, çıkartmak için de dik konuma getirerek çekip alabilirsiniz.

- Dar fön başlığı sıcak havayı toplayarak saçların bir bölümüne direkt olarak yönlendirilmesi fırça ve tarak ile şekillendirilmesini zayıf ve cılız saçların havalandırılarak dolgun görünmesini sağlar.

İyon Özelliği

Cihazda bulunan iyon özelliği saçınızın daha hızlı bir şekilde kurumasını sağlayacaktır. Negatif iyonlar havadaki su damlacıklarının boyutunu küçültür. Bu durum saçınızın daha fazla nem emmesini sağlamaktadır. Saçınızın daha fazla nem emmesi saçınızın daha yumuşak ve parlak bir görünüm kazanmasını sağlar, iyon özelliği saç kurutma makineniz çalışır çalışmaz devreye girmektedir. Negatif iyonlar, saçınızın üstündeki büyük su damlalarını kırarak küçük damlalar haline getirmektedirler. Su damlacıkları küçüldükçe, saçınız daha fazla su emer ve bu yüzden saçınız daha hızlı kurur. Bu durum ayrıca saçınızın yumuşak ve sağlıklı görünmesini sağlayan saç folikülüne daha fazla nem eklemektedir. İyon teknolojisi saçınızın daha parlak, canlı ve sağlıklı görünmesini sağlar.

6-Cihazın Temizlenmesi ve Bakımı

Cihazın dış yüzeyini kuru veya hafif nemli bir bezle temizleyebilirsiniz. Cihazı kesinlikle suya temas ettirmeyiniz, akan su altında temizlemeye çalışmayınız.

- Cihazın dar fön başlığını ve difüzörü nemli bir bez yardımıyla veya musluk suyu altında temizleyebilirsiniz. Ancak cihazın başlıklarını temizlemeden önce mutlaka cihazdan sökünüz. Başlıkları cihazınıza tekrar yerleştirmeden önce tamamen kurumuş olduğundan emin olunuz.
- Cihazınızı kutusuna veya yerine yerleştirmeden önce, tamamen soğumuş olduğundan emin olunuz. Cihazınız kolay erişim ve saklama açısından, asma halkasına sahiptir. Cihaz güç kablosunu kesinlikle cihaza sarılmış şekilde muhafaza etmeyiniz, aksi takdirde cihaz güç kablosu içindeki bağlantılar zayıflayıp, kopabilir. Cihazınızın kablosu, arızalı ise kesinlikle kullanmayınız ve kendi başınıza tamir etmeye çalışmayınız. Cihazınızın kablosu hasarlı ise, herhangi bir zararın önlenmesi

için yetkili bir Fakir servisi tarafından yerine yenisi ile değiştirilmelidir.

7-Geri Dönüşüm

Cihazın kullanım ömrünün bitmesi halinde, elektrik kablosunu keserek kullanılamayacak hale getiriniz.



Elektriksel atıklar, normal çöplerle birlikte atılmamalıdır. Ülkenizde mevcut bulunan yasalara göre, bu tür cihazlar için özel olarak belirlenmiş çöp kutularına cihazı bırakınız.

Cihazın paketlenme elemanları geri dönüşüme uygun maddelerden üretilmiştir. Bunları geri dönüşüm çöp kutularına atınız.

Cihaz 2002/96/EC sayılı WEEE yönetmeliğine uygundur.

8-Sevk

Cihazın, orijinal ambalajında veya zarar görmesini önlemek için, iyi ve yumuşak pakette taşınması gerekmektedir. Orijinal ambalajı saklanmalıdır.

NOT / NOTES

1. Introduction

Thank you for purchasing Fakir Diamond Hair Dryer which has been designed and manufactured to give you many years of trouble-free service.

Information about the operating instructions

These operating instructions are intended to enable the safe and proper handling and operation of the appliance.

Read these operating instructions carefully before using the appliance for the first time. Keep the operating instructions in a safe place. Include these operating instructions when passing the appliance on to another user.

Liability

Fakir Elektrikli Ev Aletleri DışTic. A.Ş will accept no liability for damages resulting from failure to comply with the operating instructions.

Fakir Elektrikli Ev Aletleri DışTic. A.Ş cannot assume any liability in case the appliance is used for other purposes than its intended use or handled, repaired or serviced improperly.

Safety is important

For yours and others safety please read the instructions before using the appliance. Please keep this instruction in a safe place for the further use. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied that the appliance is working.

2- Important Safeguards

CE declaration of conformity

This appliance fulfills the requirements of the Appliance and Product Safety Law (GPSG) and the EU Directives. 2004/108/EC "Electromagnetic Compatibility" and 2006/95/EC "Low-Voltage Directive." The appliance bears the CE mark on the rating plate.

Usage Area

This appliance is suitable for home usage. Do not use appliance for other than intended use and never use this appliance outdoors.

Unauthorized Use

The examples of unauthorized use listed here can result in malfunctions, damage to the appliance or personal injury: This appliance is not designed to be used by persons (including children) with limited physical, sensory or mental capacities or by persons lacking in experience and/or knowledge, unless they are supervised by someone who is responsible for their safety or have received instructions on how to use the appliance. Children should be supervised to ensure that they do not play with the appliance. Children should be supervised to ensure that they do not play with the appliance. Home appliances are not toys for children! Therefore, use and store the appliance away from the reach of children. Children do not recognize the danger involved with handling an appliance. Keep packaging films away from children - danger of suffocation!

Safety Instructions

- Before using this appliance, please read the instruction manual first.
- Before operating your appliance, make sure the power rating of your appliance does in fact match that of your electrical system
- Do not use this appliance near water contained in basins like bathtubs, washbasins, etc.
- When the hair dryer is used in a bathroom, unplug the appliance after use since the proximity of water presents a hazard, even when the hairdryer is switched off.
- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. Prevent children to reach the appliance.
- Never block the air grilles.

- If the appliance overheats, it will switch off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- Do not direct the airflow towards the eyes or other sensitive areas.
- Neither should the appliance be used with wet hands nor immersed in water, held in running water, or allowed to become wet.
- Do not use any abrasive substance for cleaning the appliance. You could clean the surface with a damp cloth.
- Do not allow children to use or play with the appliance.
- Never leave the appliance unattended when the appliance plugged in.
- Do not operate the appliance in the presence of explosive and flammable fumes or liquids.
- Keep the power cord away from heated surfaces.
- Do not use this appliance near water.
- If your appliance has fallen into water, do not try to reach it.
- Do not try to repair or disassemble the appliance by yourself.
- Never use an extension cord. Plug the appliance directly in to the electrical outlet.
- Take care to not drop the appliance.
- Do not use appliance for other than intended use. Do not use the hair dryer for purposes other than drying and styling human hair.
- Do not abuse the electrical cord. Never disconnect from outlet by pulling the power cord. Always use the body of the plug for disconnecting the appliance.
- Do not bend the power cord. Do not keep the folded power cord.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized Fakir Service facility for examination, repair or adjustment.
- Wait until the appliance is cool before storage or placing it in to its box.
- Always unplug the appliance after use.

NOTE: Please read all instructions and safety guards carefully.
Please keep this instruction manual for further usage.

3- Specifications:

Power consumption: 2200 W
Voltage: 220-240V~50 Hz
Protection class: II
Usage life: 7 years

4- Parts of Description:



5-Using the appliance

- Put the plug in the wall socket.
- Switch the appliance on by selecting the desired setting. The airflow and heat can be adjusted like as below;

0-Closed	1- Low heat
1-Low speed	2- Middle heat
2-High speed	3- High heat

- After drying hair, can use the cool shot button to set style with a continuous flow of cool air.
- The concentrator and diffuser attachment could be assembled and disassembled easily. Put the attachments in vertical position and then turn it. For disassembling you could turn it and put it out in vertical position.
- The concentrator attachment collects the hot air and transfers it directly to the hair. It helps hair to be shaped easily and seems more volume.

Ion Function

This new anti-static ionic hair appliance dries your hair faster. Negative ions reduce the size of water droplets on the air. Ion technology allows more water to be absorbed. This helps condition, soften and make the hair shinier. The ionic function automatically operates when the unit is switched 'On'.

Negative ions cause large water droplets on the hair to be broken up in to smaller drops. When droplets are smaller, more water is absorbed into the hair, hence the hair is dried quicker.

This also adds more moisture to the hair follicle, which has a conditioning and smoothing effect.

More light is reflected off a smooth surface, which will therefore make the hair look shinier.

6-Cleaning and Maintenance of the appliance

You could clean the appliance's surface with a damp cloth. Never immerse the unit into water or try to clean the unit under running water.

- The attachments can be cleaned with a moist cloth or rinsed under a running tap. But remove the attachments from the appliance before cleaning it. Make sure the attachments are dry before using or storing it. Allow the appliance to cool and store it in a dry location. This hair dryer features a loop allowing it to be conveniently hung on a hook for easy access. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. Do not operate the appliance with a damaged cord or try to repair it by yourself. Return appliance to an authorized Fakir Service facility for examination, repair or adjustment.

7-Waste Disposal

If the service life of the device has ended, in particular if functional disturbances occur, make the worn-out device unusable by cutting through the power cable.

Dispose of the device according to the environmental regulations applicable in your country.



Electrical waste must not be disposed of together with household waste. Bring the worn-out device to a collection center. The packaging of the device consists of recycling-capable materials. Place these, sorted out according to material, in the collectors provided, so that

recycling can be carried out on them. For advice on recycling, refer to your local authority or your dealer

This appliance fulfills the requirements of the 2002/96/EC WEEE regulations.

8-Dispatch

Carry the appliance in the original package or a similar, well-padded package to prevent damage to the appliance.

Always keep the original package.

NOT / NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

NOT / NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



İmalatçı / İthalatçı Firma: Fakir Elektrikli Ev Aletleri Dış Tic. A.Ş.
Meşrutiyet Cad. No:43 Tepebaşı-İstanbul TÜRKİYE
Tel:(212) 249 70 69 (pbx) Fax:(212) 251 51 42